 
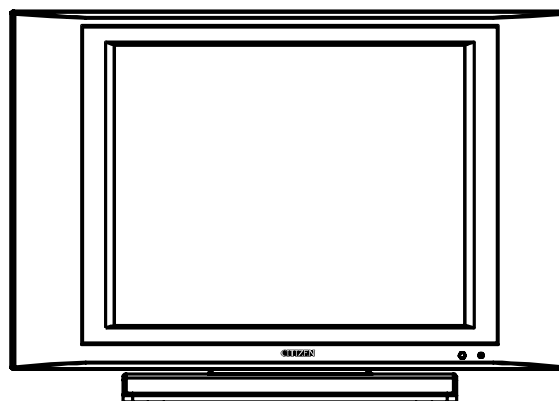 


USER MANUAL


CITIZEN[®] LT1560 15" LCD Television



CONTENTS

CONTENTS	1
Safety Instructions	2
Important Safety Instructions:	2
1.INTRODUCTION	5
Product Description	5
Product Features	5
Package Contents.....	6
2. SYSTEM SETUP	7
Top Panel & Remote Control Function.....	7
Assembly and Connection & Input/Output Signal Connections	10
3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS	14
TV and AV Operating Instructions.....	14
Using the LCD as a Computer Monitor	23
4. REFERENCE	27
About VChip Control	27
MPAA option	28
PC Display Modes	28
Cleaning LCD Monitor.....	28
Troubleshooting	29
5. APPENDIX	30
Specifications:.....	30
6. WARRANTY.....	31

 Safety Instructions

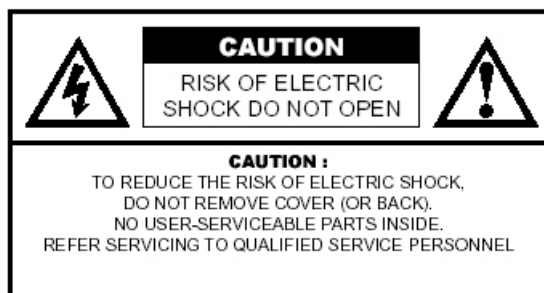

The Lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated "DANGEROUS VOLTAGE " within the product's enclosure that may be of sufficient magnitude to constitute a risk or electric shock to persons.



The Exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing instructions in the literature accompanying the product).

Important Safety Instructions:

Read Instructions - All the safety and operating instructions should be read before the product is operated.

Retain Instructions - The safety and operating instructions should be retained for future references.

Heed Warnings - All Warnings on the product and in the operation instructions should be adhered to.

Follow Instructions - All Operating and user instructions should be followed.

Cleaning - Unplug this product from the wall outlet before cleaning. DO NOT use liquid cleaners or aerosol cleaners. Use damp Cloth for cleaning.

Attachments - DO NOT use attachments not recommended by the product manufacturer they may cause hazards.

Keep Away From Heated Areas – Do not place the LCD TV near heat; for example, near a radiator, stove, or other heating device.

Water - DO NOT use this product near water. For example: Avoid placing it near bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Cabinet Slots - NEVER push objects or any kind into the unit through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. NEVER spill liquid of any kind on the product.

Important Safety Instructions Continued

Ventilation - DO NOT block any ventilation openings. Install in accordance with manufacture's instructions. Slots and openings in the cabinet and the back and bottom are provided for ventilation, and to ensure reliable operation of the product and to protect it from Overheating. These openings must NOT be blocked or covered. There should be at least 10cm of space from these openings. The openings should never be blocked by placing the unit on a bed, rug or other similar surface.

This product should NOT be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

Grounding or Polarization - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider then the other). This plug will fit the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

DO NOT defeat the safety purpose of the polarized plug.

Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Power Sources - This product should be operated only from the type of power source indicated on. the rear panel. If you are not sure of the type of power supply to your home consult your product dealer or local power company.

Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for a long period of time, unplug it from the outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Overload - DO NOT overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

Important Safety Instructions Continued

Damages Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions :

1. When the power-supply cord or plug is damaged.
2. If liquid has been spilled, or objects have fallen into the product.
3. If the product has been exposed to rain or water.
4. If the product does not operate normally after following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
5. If the product has been dropped or damaged in any way.
6. When the product exhibits a distinct change in performance - this indicates a need for service.

Replacement parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part.

UNAUTHORIZED substitution may result in fire, electric shock or other hazards.

Safety Check - Upon completion of any service or repair to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Heat - The Product should be situated away from heat source such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

Mounting - DO NOT place this product on an unstable cart, stand, tripod, bracket, or table.

The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of this product should follow the manufacture's instructions, and should use a mounting accessory recommended by the manufacturer.

Operate - Do not apply excessive force to operate the switch, control key and connector. Disconnect the power plug from the AC outlet before you move the unit.

Screen care - Do not touch the screen directly with your fingers. You may damage the screen, oil from your skin is difficult to remove.

 
Do not apply pressure to screen. The LCD is very delicate.

Installation - Please install the LCD in a cool, dry and clean area, avoid heat, or excessive vibration, dust, humidity, extreme cold and magnetic devices.

Recycling - This product utilizes tin-lead solder, and has a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact you local authorities, or the Electronics Industries Alliance: <http://www.eiae.org/>

1.INTRODUCTION

Product Description

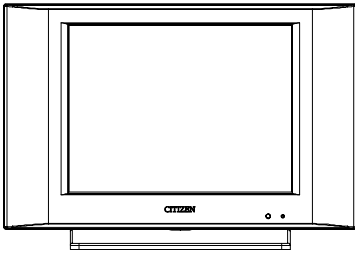


Thank you for choosing the TFT-LCD Color TV/Monitor and for your continued support and use of our products. The Product combines the features of a TV/MONITOR with a THIN FILM TRANSISTOR liquid crystal display (TFT-LCD). This new generation of TFT-LCD incorporates a high

quality display in a light weight module, power-saving capabilities, and emits no radiation.

The features a color-active matrix/ Thin-Film-Transistor (TFT)/ Liquid Crystal Display (LCD) to provide superior display performance. A maximum resolution (See Specifications) is ideal for displaying complex graphics and high definition images from your computer.

 The Product has many features, such as multiple analog video signal inputs, multiple analog audio signal inputs and outputs, large high quality 2D stereo speakers, and high-level amplifier connections that provide a top-of-the-line audio and video experience. In addition, the TFT-LCD display allows a “Plug & Play” connection to your PC and has a built-in On Screen Display (OSD) function that allows you to adjust and operate the unit from the convenience of a remote control.

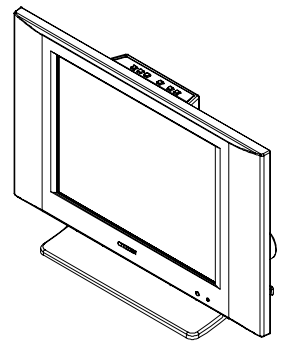


Product Features


- Wide viewing angel: Horizontal 160 °/ Vertical 140° (CR>=5)
- High brightness : 250 cd/m²
- High contrast ratio : 500:1
- Fast response time 20 ms (Typ)
- XGA (1024 x 768 pixels) resolution
- Display Color: 16 millions
- Auto-tune image optimization for VGA
- 2D De-interlace function
- HDTV support (YPbPr / YCbCr, 480i, 480p, 1080i, 720p) via the VGA port and an optional VGA to 3 RCA cable.
- Easy access top keypad controls (Menu, Volume up/down, CH up/down, Power)
- Built-in audio amplifier (2W×2)
- Bundled 2W(max) x 2 stereo speaker
- Wall-mountable design.

Package Contents

 
Please check the LCD TV package to make sure it contains the following items:

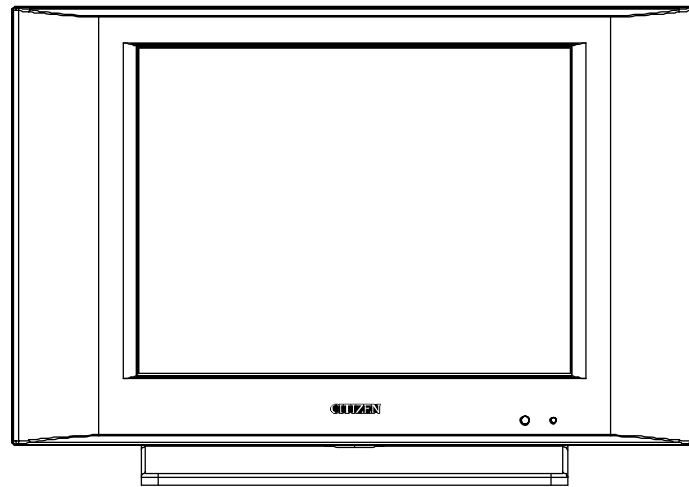

15" TFT LCD

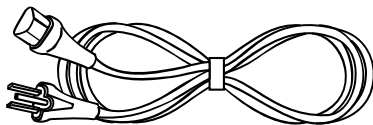 


Power cord

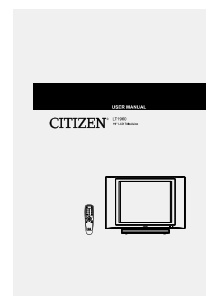 


User manual



 AAA size x 2
Batteries (for remote control)





Remote Control

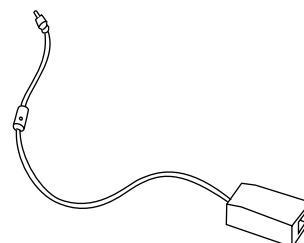 

Adaptor

2. SYSTEM SETUP

  Top Panel & Remote Control Function

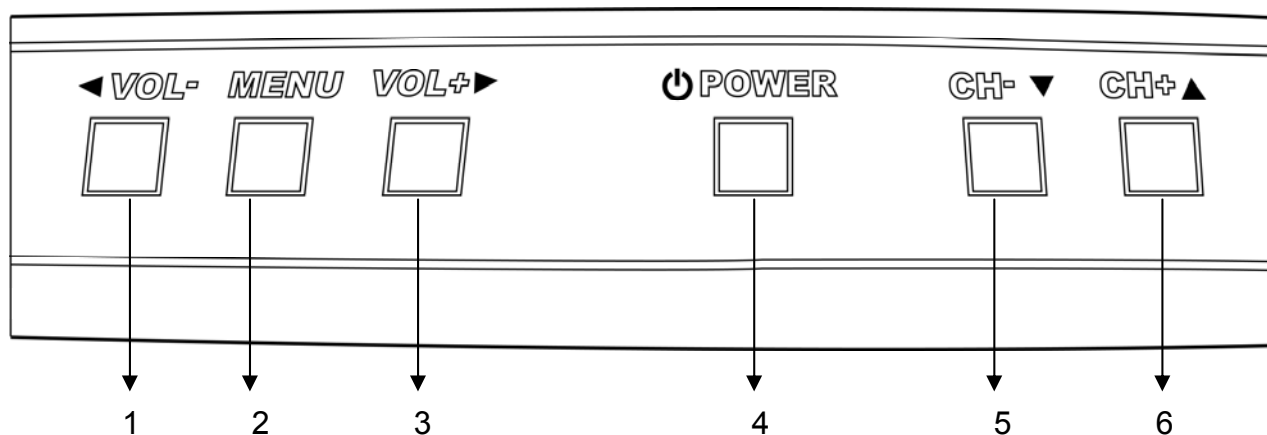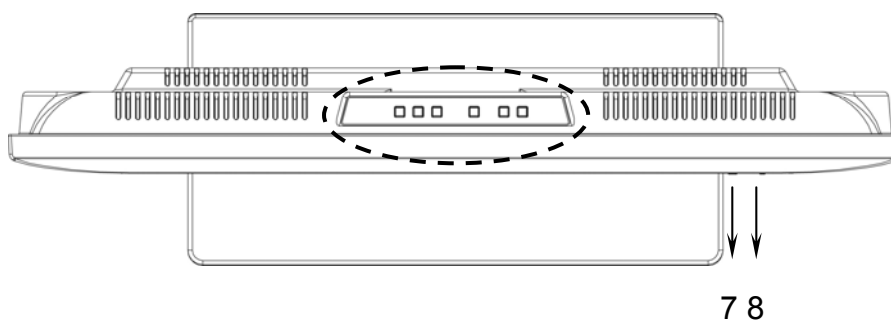

1. VOL -	Decrease Volume / Left navigation key
2. MENU	a. ENTER –Confirm Function b. MENU –Display Main Menu
3. VOL +	Increase volume / Right navigation key
4. Power	Power standby on or off
5. CH -	Decrease TV channel / Down navigation key
6. CH +	Increase TV channel/Up navigation key
7. IR	IR sensor
8. LED	Red – Stand by ° Green – On °

SYSTEM SETUP


Remote Control Unit

1	MUTE	2	1	Mute Volume off
			2	POWER To turn power on/off
	1 2 3 4 5 6 7 8 9 1-- 0 JUMP	3	3	KEYPAD Press number key to select channel of TV
			4	CH+ Advances to the next channel
			5	VOL+ Increases volume setting
			6	TV/VIDEO Source selection
12	CH+ VOL- ENTER VOL+ CH-	4 5	7	SLEEP Programs the unit to turn off at a specified time.
9	MENU	11	8	INFO Displays the signal source of the current channel.
10		6	9	MENU Displays the main menu on screen
8	INFO SLEEP	7	10	CH- Returns to the previous channel
			11	ENTER Enters command keypad functions
			12	VOL- Decrease volume setting

SYSTEM SETUP

Remote Control Function

 Remote Control Battery Installation & Removal

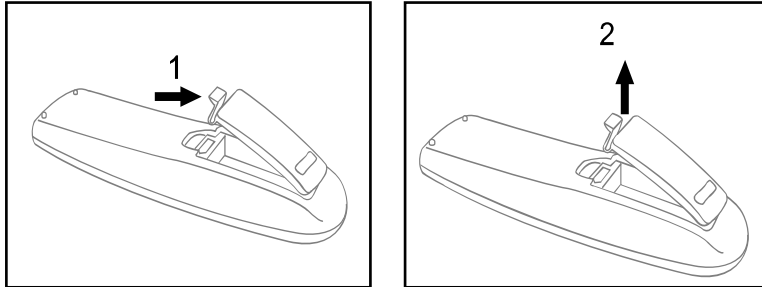


Insert the batteries **carefully**, following the polarity in battery case.
Change the batteries if the remote control does not function.

•Remote Control Operation

The Remote Control Transmission consists of an infrared (IR) Signal.

 Make sure the line-of-sight between Remote Control and LT1560 is clear of objects that could interfere with the remote IR signal. Always point the Remote Control directly at the LT1560 sensor.

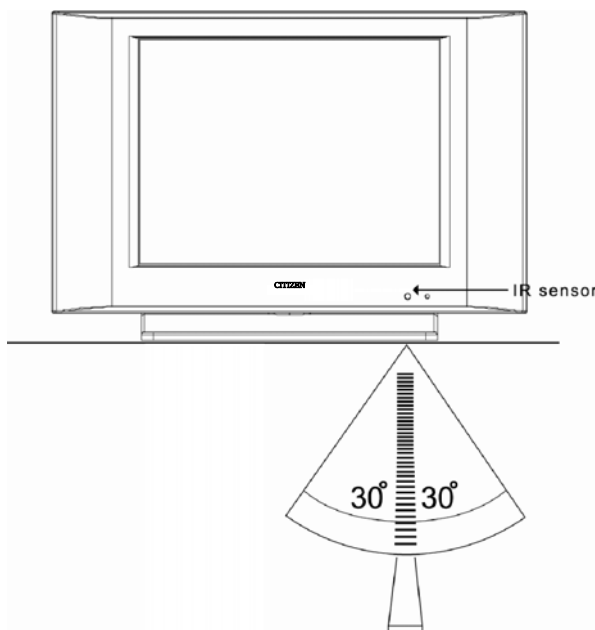

•CAUTION!

Avoid damaging the Remote Control by:

 
1. Applying excessive pressure when pressing buttons.
2. Exposing to extreme Low or High temperatures.
3. Exposing to excessive moisture.

SYSTEM SETUP


Assembly and Connection

Locate the power cable in the accessory box and connect it to the DC-IN connector

Plug the other end of the power cable into the wall outlet.

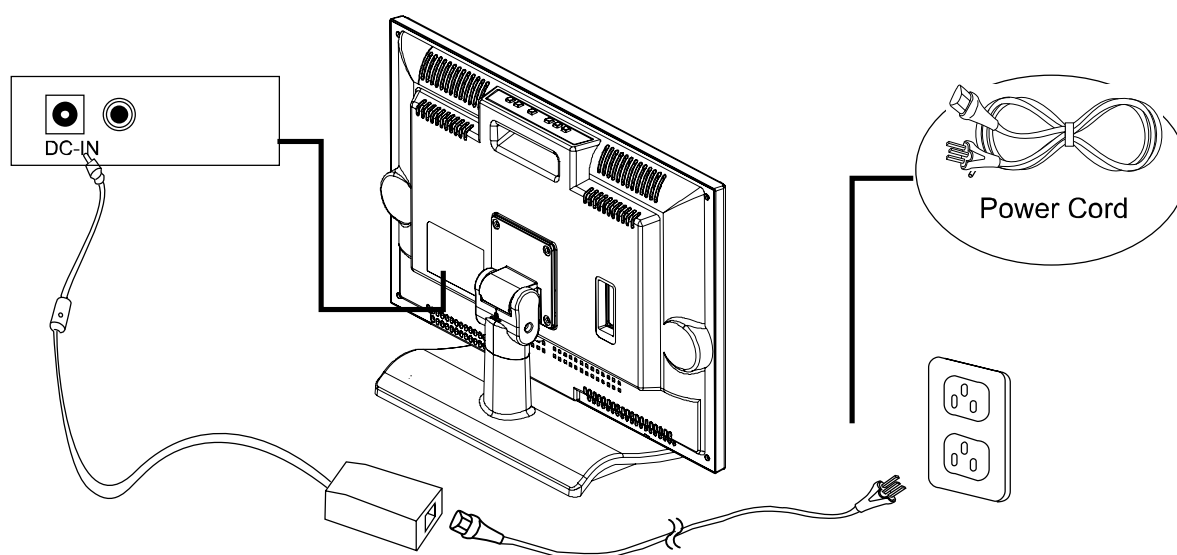

Input & Output Signal Connections

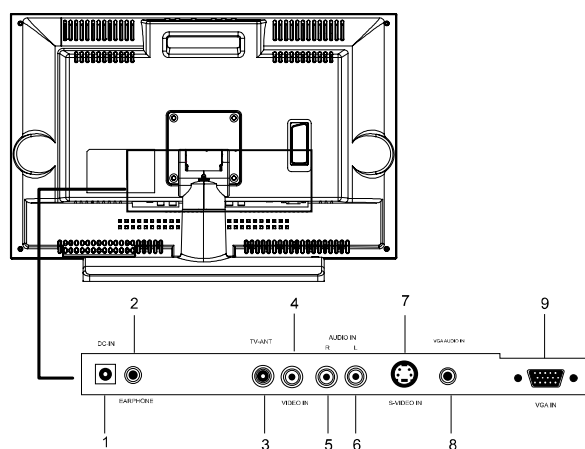 


1	DC POWER ADAPTER INPUT
2	EARPHONE OUTPUT
3	ANT.CABLE INPUT
4	VIDEO INPUT
5	RIGHT AUDIO INPUT
6	LEFT AUDIO INPUT
7	S-VIDEO INPUT
8	PC AUDIO INPUT
9	VGA INPUT


SYSTEM SETUP

Input & Output Signal Connections

 Connecting Coaxial Cable, Connecting Earphone

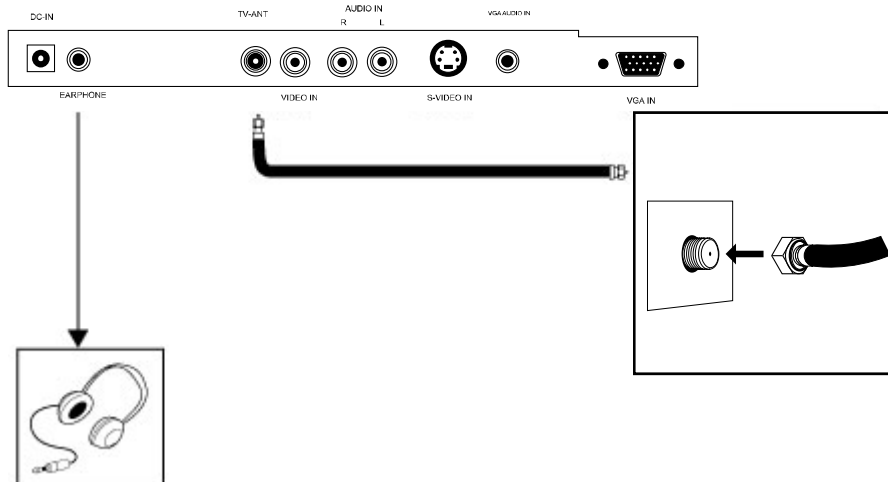

 
Connecting to S-VIDEO terminal equipment such as DVD, VCR or Gaming Console

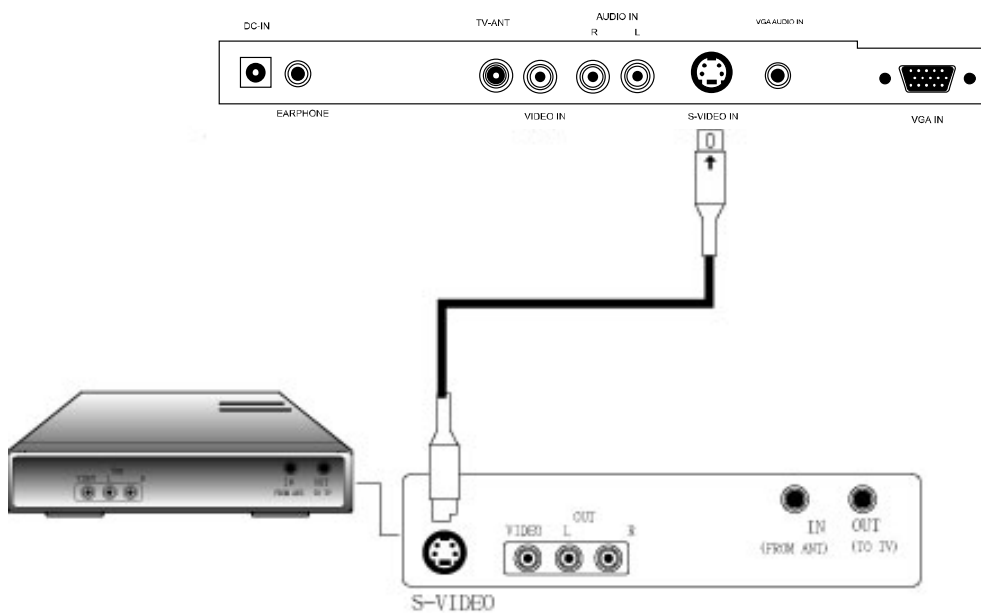

SYSTEM SETUP

Input & Output Signal Connections

 
Connecting to AV equipment such as DVD, VCR and Gaming Console
(Cable is optional kit)

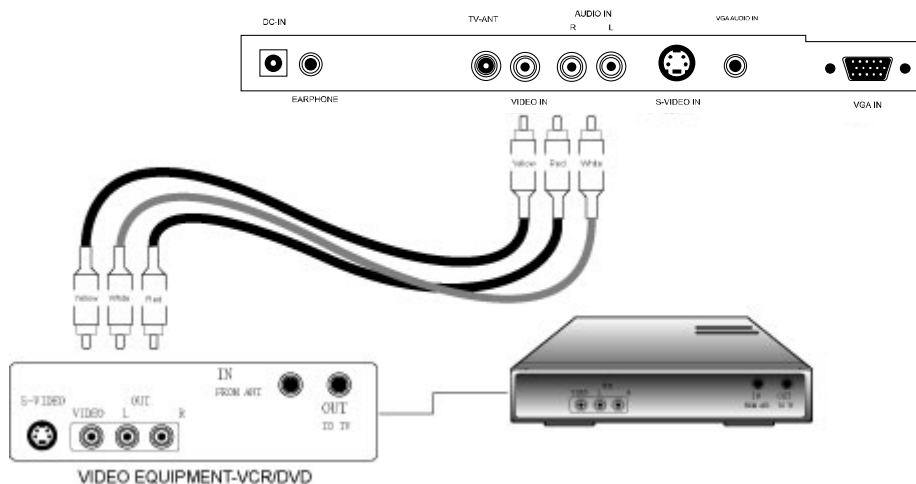

SYSTEM SETUP

Input & Output Signal Connections

 
Connecting from a PC via 1/8" Male-to-Male Stereo Cable (PC Audio)
(Cable is optional kit)

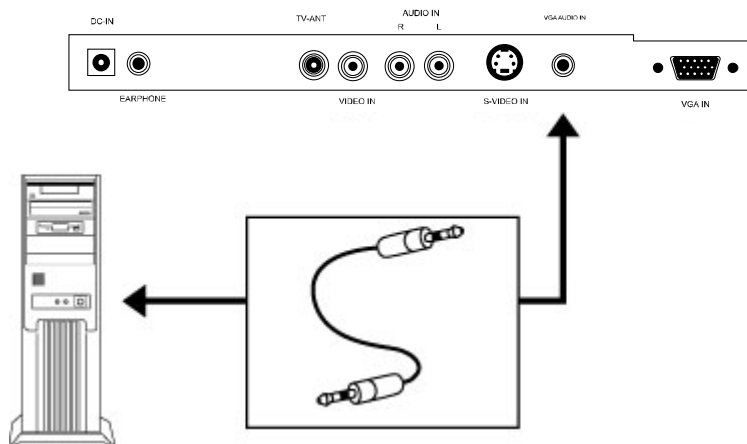

SYSTEM SETUP

Input & Output Signal Connections

 Connecting to from a PC via 15-PIN VGA Cable (PC Video)
(Cable is optional kit)

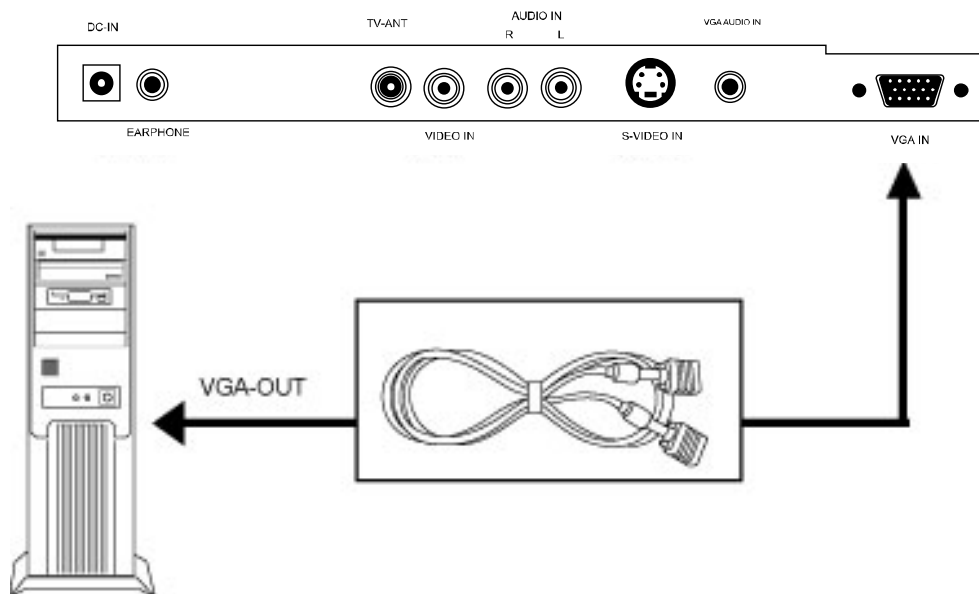

3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS

TV and AV Operating Instructions

Press the Menu button to display the following Main Menu :

MAIN DISPLAY Operating Instructions

This session is used to Choose Input Source.

Level1	Level2	Level3 / Function
<div> <div>Main Menu</div> <div> <div>Main Disp</div> <div>Image Setup</div> <div>Audio Setup</div> <div>PC Setup</div> <div>TV Setup</div> <div>Language</div> <div>Recall</div> <div>Quit</div> </div> </div>	<div> <div>Main Disp</div> <div> <div>TV</div> <div>AV</div> <div>S – Video</div> <div>PC</div> <div>CVI</div> <div>Return</div> </div> </div>	<div> <div>1. TV - TV Input Signal</div> <div>2. AV Input Signal</div> <div>3. S – VIDEO Input Signal</div> <div>4. PC - Computer Input Signal</div> <div>5. CVI –HDTV support (YCbCr / YPbPr, 480i, 480p, 1080i, 720p) via the VGA port and an optional VGA to 3 RCA cable.</div> <div>6. Return - Back to Main Menu</div> </div>

Press
【Enter】

NOTE:

Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

Image Setup Operating Instructions – Brightness

This session is used to adjust brightness of screen picture.

Level1	Level2	Level3 / Function
<div> <div>Main Menu</div> <div> <div>Main Disp</div> <div>Image Setup</div> <div>Audio Setup</div> <div>PC Setup</div> <div>TV Setup</div> <div>Language</div> <div>Recall</div> <div>Quit</div> </div> </div>	<div> <div>Image Setup</div> <div> <div>Brightness</div> <div>Contrast</div> <div>Sharpness</div> <div>Tint</div> <div>Color</div> <div>Return</div> </div> </div>	<div> <div>Press 【Enter】</div> <div> <div>50</div> <div>It will show the progress bar at screen foot.</div> <div>Use the ◀ and ▶ to adjust.</div> <div>Press enter for return.</div> </div> </div>

Press
【Enter】

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Image Setup Operating Instructions – Contrast

This session is used to adjust contrast of screen picture.

Level1		Level2		Level3 / Function
Main Menu		Image Setup		
Main Disp		Brightness		
Image Setup		Contrast	Press	 50
Audio Setup	Press	Sharpness	【Enter】	It will show the progress bar at screen foot.
PC Setup	【Enter】	Tint		Use the ◀ and ▶ to adjust.
TV Setup		Color		Press enter for return.
Language		Return		
Recall				
Quit				

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Image Setup Operating Instructions – Sharpness

This session is used to adjust sharpness of screen picture.

Level1		Level2		Level3 / Function
Main Menu		Image Setup		
Main Disp		Brightness		
Image Setup		Contrast	Press	 1
Audio Setup	Press	Sharpness	【Enter】	It will show the progress bar at screen foot.
PC Setup	【Enter】	Tint		Use the ◀ and ▶ to adjust.
TV Setup		Color		Press enter for return.
Language		Return		
Recall				
Quit				

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Image Setup Operating Instructions – Tint

This session is used to adjust TINT of screen picture.

Level1		Level2		Level3 / Function
Main Menu		Image Setup		
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press 【Enter】	<div> Brightness Contrast Sharpness Tint Color Return </div>	Press 【Enter】	<div>  0 It will show the progress bar at screen foot. Use the ◀ and ▶ to adjust. Press enter for return. </div>

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Image Setup Operating Instructions – Color

This session is used to adjust Color of screen picture.

Level1		Level2		Level3 / Function
Main Menu		Image Setup		
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press 【Enter】	<div> Brightness Contrast Sharpness TINT Color Return </div>	Press 【Enter】	<div>  50 It will show the progress bar at screen foot. Use the ◀ and ▶ to adjust. Press enter for return. </div>

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Audio Operating Instructions – Treble

This session is used to adjust Treble of audio.

Level1		Level2		Level3 / Function
Main Menu		Audio Setup		
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press	<div> Treble Bass Balance Return </div>	Press	<div>  3 </div>
	【Enter】		【Enter】	<p>It will show the progress bar at screen foot.</p> <p>Use the ◀ and ▶ to adjust.</p> <p>Press enter for return.</p>

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Audio Operating Instructions – Bass

This session is used to adjust Bass of audio.

Level1		Level2		Level3 / Function
Main Menu		Audio Setup		
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press	<div> Treble Bass Balance Return </div>	Press	<div>  1 </div>
	【Enter】		【Enter】	<p>It will show the progress bar at screen foot.</p> <p>Use the ◀ and ▶ to adjust.</p> <p>Press enter for return.</p>

NOTE:


Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

Audio Operating Instructions – Balance

This session is used to adjust Balance of audio.

Level1		Level2		Level3 / Function
Main Menu		Audio Setup		
Main Disp		Treble		
Image Setup		Bass		
Audio Setup	Press	Balance	Press	 0
PC Setup	【Enter】	Return	【Enter】	It will show the progress bar at screen foot.
TV Setup				Use the ◀ and ▶ to adjust.
Language				Press enter for return.
Recall				
Quit				

NOTE:

 
Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

TV Setup Operating Instructions – AIR CATV

This session is used to select TV source.

Level1		Level2		Level3 / Function
Main Menu		TV Setup		
Main Disp		AIR CATV	Press	
Image Setup		Auto Program	【Enter】	It will show 2 options at screen foot.
Audio Setup		Add Erase CH		Use the ◀ and ▶ to select.
PC Setup	Press	Close Caption		Press enter for confirm.
TV Setup	【Enter】	VChip Control		P.S: AIRTV means Antenna.
Language		System Setup		CATV means Cable TV.
Recall		Return		
Quit				

NOTE:

Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

TV Setup Operating Instructions – Auto Program

This session is used to scan TV channel and memory.

Level1	Level2	Level3 / Function
<div> Main Menu <div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div> </div>	<div> TV Setup <div> AIR CATV Auto Program Add Erase CH Close Caption VChip Control System Setup Return </div> </div>	<div> <div> No Yes </div> It will show 2 options at screen foot.. Use the ◀ and ▶ to select. Press enter for confirm. P.S: “No” means return. “ Yes” means scan and memory. </div>

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

TV Setup Operating Instructions – Add Erase CH

This session is used to erase TV channel.

Level1	Level2	Level3 / Function
<div> Main Menu <div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div> </div>	<div> TV Setup <div> AIR CATV Auto Program Add Erase CH Close Caption VChip Control System Setup Return </div> </div>	<div> <div> Add Erase Exit. </div> It will show 3 options at screen foot.. Use the ◀ and ▶ to select. Press enter for confirm. </div>

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

TV Setup Operating Instructions – Close Caption

This session is used to select close caption option.

Level1		Level2		Level3 / Function
Main Menu		TV Setup		
Main Disp		AIR CATV		
Image Setup		Program		
Audio Setup		Add Erase CH		
PC Setup		Close Caption	Press 【Enter】	It will show 1 option only at screen foot. But you can change setting between flowing options.
TV Setup	Press 【Enter】	VChip Control		Off→CC1→CC2→CC3→CC4→
Language		System Setup		TT1→TT2→TT3→TT4
Recall		Return		Press enter to select.
Quit				

NOTE:

Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

TV Setup Operating Instructions – VChip Control

This session is used to set VChip Control option.

Level1		Level2		Level3 / Function
Main Menu		TV Setup		VChip Control
Main Disp		AIR CATV		Set password
Image Setup		Program		VChip Lock
Audio Setup		Add Erase CH		Class Option
PC Setup		Close Caption		MPAA Option
TV Setup	Press 【Enter】	VChip Control	Press 【Enter】	Return
Language		System Setup		
Recall		Return		
Quit				

NOTE:

Use the ▲ and ▼ to move between the options,

Press the Menu button again to select.

When you select this option, system will request password for entry.(default code is 3308) - Above function will explain at flowing session.

TV Setup Operating Instructions – VChip Control – Set password

This session is used to re-set VChip Control password.

Level3	Level4 / Function	
VChip Control		
<div> <div>Set password</div> <div>VChip Lock</div> <div>Class Option</div> <div>MPAA Option</div> <div>Return</div> </div>	Press 【Enter】	<div>SET PASSWORD</div> <div>----</div>
Re-set password - Input the four digits Parent Control Password and Confirm using the Enter Button.		

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

TV Setup Operating Instructions – VChip Control – VChip Lock

This session is used to set VChip Control on or off.

Level3	Level4 / Function	
VChip Control		
<div> <div>Set password</div> <div>VChip Lock</div> <div>Class Option</div> <div>MPAA Option</div> <div>Return</div> </div>	Press 【Enter】	<div>Off On</div> <div>It will show 2 options at screen foot..</div> <div>Use the ◀ and ▶ to select. Press enter for confirm.</div>

NOTE:

Use the ▲ and ▼ to move between the options, Press the Menu button again to select.

TV Setup Operating Instructions – VChip Control – Class Option

This session is used to set VChip Control class.

Level3	Level4 / Function	
VChip Control	Class Option	
<div> <div>Set password</div> <div>VChip Lock</div> <div>Class Option</div> <div>MPAA Option</div> <div>Return</div> </div>	Press 【Enter】	<div> <div>TV-Y</div> <div>TV-Y7</div> <div>TV-G</div> <div>TV-PG</div> <div>TV-14</div> <div>TV-MA</div> <div>Return</div> </div> <div> <div>All Children</div> <div>Directed to Older Children (above age of 7)</div> <div>General Audience</div> <div>Parental Guidance Suggested</div> <div>Parents Strongly Cautioned</div> <div>Mature Audience Only</div> </div>
<p>NOTE:</p> <p>Use the ▲ and ▼ to move between the options, Press the Menu button again to select.</p> <p>Press Enter menu button to select Blocked or Unblocked.</p>		

TV Setup Operating Instructions – VChip Control – MPAA Option

This session is used to select MPAA movie ratings. P.S: Motion Picture Association of America (MPAA)

Level3	Level4 / Function	Reference
VChip Control Set password VChip Lock Class Option MPAA Option Return	MPAA Option G PG PG-13 R NC-17 X Return	Movie ratings: G: General Audiences. PG: Parental Guidance Suggested. PG-13: Parents Strongly Cautioned. R: Restricted NC-17: No One 17 and Under admitted X: Adult only.

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

Press Enter menu button to
select Blocked or Unblocked.

TV Setup Operating Instructions – System Setup

This session is used to set VChip Control option.

Level1	Level2	Level3 / Function
Main Menu Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit	TV Setup AIR CATV Program Add Erase CH Close Caption VChip Control System Setup Return	System Setup STD HRC IRC AUTO Return

NOTE:

Use the ▲ and ▼ to move between the options, Press
the Menu button again to select.

Broadcast TV Frequency Allocations:
 STD = Standard
 HRC = Harmonic related carrier
 IRC = Interval related carrier
 AUTO = Auto

LANGUAGE Operating Instructions

This session is used to select the language display of OSD.

Level1	Level2	Level3 / Function
Main Menu Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit	Language English French Spanish	Press Enter menu button to select French, Spanish or English.

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

Recall Operating Instructions

Level1	Level2	Level3 / Function
Main Menu		
Main Disp	Automatically reset setting to factory defaults.	
Image Setup		
Audio Setup		
PC Setup		
TV Setup		
Language		
Recall		
Quit		

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

Quit Operating Instructions

Level1	Level2	Level3 / Function
Main Menu		
Main Disp	Quit – Exit the on-screen-menu controls	
Image Setup		
Audio Setup		
PC Setup		
TV Setup		
Language		
Recall		
Quit		

NOTE :

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

Using the LCD as a Computer Monitor

Press and release the Menu button to display the following Main Menu :

MAIN DISPLAY Operating Instructions - PC

Level1	Level2	Level3 / Function
Main Menu		
Main Disp	Main Disp	
Image Setup		
Audio Setup		
PC Setup		
TV Setup		
Language		
Recall		
Quit		

Press
【Enter】

TV	1. TV - TV Input Signal
AV	2. AV Input Signal
S—Video	3. S—VIDEO Input Signal
PC	4. PC - Computer Input Signal
CVI	5. CVI –HDTV support (YCbCr / YPbPr, 480i, 480p, 1080i, 720p) via the VGA port and an optional VGA to 3 RCA cable.
Return	6. Return - Back to Main Menu

NOTE:

Use the ▲ and ▼ to move between the options, Press the Menu button again to select.




PC Setup Operating Instructions – Color

Level1		Level2		Level3 / Function
Main Menu		PC Setup		Color
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press 【Enter】	<div> Color H Position V Position Phase Clock Auto Adjust Feature Return </div>	Press 【Enter】	<div> 6500K 7500K 9300K User Color Return </div>

NOTE:

Use the ▲ and ▼ to move between the options, Press the Menu button again to select.


PC Setup Operating Instructions – Color – User Color

Level3		Level4 / Function
Color		User Color
<div> 6500K 7500K 9300K User Color Return </div>	Press 【Enter】	<div> Red Green Blue Return </div> <div> Red  125 Green  125 Blue  125 </div>

NOTE: Use the ▲ and ▼ to move between the options, Press the Menu button again to select. Use the ◀ and ▶ to select. Press enter for confirm.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.


PC Setup Operating Instructions – H Position

Level1		Level2		Level3 / Function
Main Menu		PC Setup		
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press 【Enter】	<div> Color H Position V Position Phase Clock Auto Adjust Feature Return </div>		<div>  50 It will show the progress bar at screen foot. Use the ◀ and ▶ to adjust. Press enter for return. </div>

NOTE: Use the ▲ and ▼ to move between the options, Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.


PC Setup Operating Instructions – V Position

Level1	Level2	Level3 / Function
Main Menu Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit	PC Setup Color H Position V Position Phase Clock Auto Adjust Feature Return	 50 It will show the progress bar at screen foot. Use the ◀ and ▶ to adjust. Press enter for return.

NOTE: Use the ▲ and ▼ to move between the options, Press the Menu button again to select.


★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

PC Setup Operating Instructions – Phase

Level1	Level2	Level3 / Function
Main Menu Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit	PC Setup Color H Position V Position Phase Clock Auto Adjust Feature Return	 50 It will show the progress bar at screen foot. Use the ◀ and ▶ to adjust. Press enter for return. ★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

NOTE: Use the ▲ and ▼ to move between the options, Press the Menu button again to select.

PC Setup Operating Instructions – Clock

Level1	Level2	Level3 / Function
Main Menu Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit	PC Setup Color H Position V Position Phase Clock Auto Adjust Feature Return	 50 It will show the progress bar at screen foot. Use the ◀ and ▶ to adjust. Press enter for return.

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

★ All values on the gauge bar only for reference. For actual values please refer to factory defaults.

PC Setup Operating Instructions – Auto Adjust

Level1		Level2	Level3 / Function
Main Menu		PC Setup	
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press 【Enter】	<div> Color H Position V Position Phase Clock Auto Adjust Feature Return </div>	Automatically adjust the TV setting to fit for PC mode.

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

PC Setup Operating Instructions – Feature

This function is showing the signal information only.

Level1		Level2	Level3 / Function
Main Menu		PC Setup	
<div> Main Disp Image Setup Audio Setup PC Setup TV Setup Language Recall Quit </div>	Press 【Enter】	<div> Color H Position V Position Phase Clock Auto Adjust Feature Return </div>	<div> 640x480 60Hz H: 31.5 KHz V: 60.0 Hz </div> <p>Not support (Resolution >1024 x 768) Over range (V sync>75Hz) No signal (No signal Input)</p>

NOTE:

Use the ▲ and ▼ to move between the options,
Press the Menu button again to select.

4. REFERENCE

About VChip Control

Class option

The following categories apply to programs designed for the entire audience.



[TVY All Children.](#)

This program is designed to be appropriate for all children. Whether animated or live-action, the themes and elements in this program are specifically designed for a very young audience, including children from ages 2 - 6. This program is not expected to frighten younger children.



[TVY7 Directed to Older Children.](#)

This program is designed for children age 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence or comedic violence, or may frighten children under the age of 7. Therefore, parents may wish to consider the suitability of this program for their very young children. Note: For those programs where fantasy violence may be more intense or more combative than other programs in this category, such programs will be designated TV-Y7-FV.

The following categories apply to programs designed for the entire audience.



[TVG General Audience.](#)

Most parents would find this program suitable for all ages. Although this rating does not signify a program designed specifically for children, most parents may let younger children watch this program unattended. It contains little or no violence, no strong language and little or no sexual dialogue or situations.



[TVPG Parental Guidance Suggested.](#)

This program contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The theme itself may call for parental guidance and/or the program contains one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).



[TV14 Parents Strongly Cautioned.](#)

This program contains some material that many parents would find unsuitable for children under 14 years of age. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialogue (D).



[TVMA Mature Audience Only.](#)

This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. This program contains one or more of the following: graphic violence (V), explicit sexual activity (S), or crude indecent language (L).

MPAA option

G: General Audiences -- All ages permitted.

PG: Parental Guidance Suggested -- Some material may not be suitable for children.

PG-13: Parents Strongly Cautioned -- Some material may be inappropriate for children under 13.

R: Restricted -- Under 17 requires accompanying parent or adult guardian.

NC-17: No One 17 and Under admitted.

(Reference to <http://www.mpaa.org/>)


PC Display Modes

Resolution	Hsync	Vsync
640 x 480	24.8 KHz	60.00Hz
640 x 480	31.5 KHz	60.00Hz
720 x 400	31.5 KHz	60.00Hz
800 x 600	37.9 KHz	60.00Hz
1024 x 768	48.4 KHz	60.00Hz

Max resolution is 1024 x 768 recommend vertical scan frequency is 60Hz

LCD Monitor Display Angle

 Vertical: Up 30°/ Down 5°

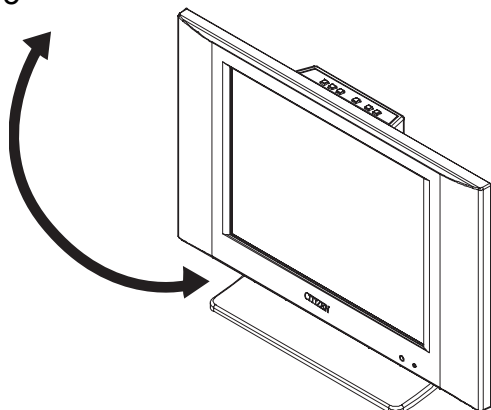

Cleaning LCD Monitor

1. Please make sure that you have turned off this machine.
2. Don't put any liquid on LCD Monitor or plastic box directly.

Please NOTE when cleaning the LCD monitor.

1. Gently wipe screen with a clean, soft, lint-free cloth to remove dust and other particles that can scratch the screen.
2. To clean the tough areas, use a soft, lint-free cloth with a few drops of water to remove the stubborn dirt.
3. Do not apply pressure to the surface of the TFT-LCD

When you clean the housing:

1. Use a soft, dry cloth to clean housing.
2. To clean tough areas, use a soft, lint-free cloth with a few drops of water to remove the stubborn dirt.

Troubleshooting

Please use the following table to resolve the most common possible causes of the problem before calling service personnel. A minor adjustment may eliminate the problem and restore your TV reception.

Symptom	Corrective Actions
No picture screen	<ol style="list-style-type: none"> 1. Check that power is turned on, or that power adapter lamp is lit. 2. Adjust brightness and contrast. 3. Check input signal of TFT-LCD. 4. Check the power connection to the unit with screen. 5. Check Main Display selection.
Picture is not clear	<ol style="list-style-type: none"> 1. Check that Video cable is plugged in. 2. Refer to the Picture Adjustments Menu in the OPERATING INSTRUCTIONS.
Image is fuzzy	<ol style="list-style-type: none"> 1. The power could be failing, try connecting the unit to another power outlet. 2. Move unit a way from the magnetic equipment, such as Wireless Receiver, AC Transformer ...etc. 3. Refer to the Picture Adjustment Procedure Menu in the OPERATING INSTRUCTIONS.
Colors are distorted	Check that the Video cable is plugged in securely.
Screen bounces or has wavy oscillations	<ol style="list-style-type: none"> 1. Check Video input range (V-sync : Max. 75Hz, H-sync : Max.48.08KHz) 2. Make sure Video cable connections are secure.
No sound	<ol style="list-style-type: none"> 1. Check speaker line connections. 2. Sound might be muted, try adjusting the volume.
Only one speaker operates	<ol style="list-style-type: none"> 1. Check audio wire connections with source device. 2. Check the unit's speaker wires are securely connected.
Remote Control inoperative	<ol style="list-style-type: none"> 1. Check for light or obstacle interference with remote control signal and move unit to another location. 2. Batteries are dead; replace batteries with new ones.
Poor Picture Reception and / or Poor Sound Quality	From TV SETUP mode, select the appropriate setting and Rerun AUTO PROGRAM.
When all else fails Reset the firmware	Turn on power. Press and hold the VOL+ button and VOL- on the top of the unit and hit the MENU button at the same time. For five seconds and release.

If the unit does not operate normally, after the operating instructions were followed. And the troubleshooting section did not help refer to dealer or qualified service personnel.

5. APPENDIX

Product Specifications

Monitor Display Specifications	
Screen Size	15" (Viewable)
Aspect Ratio	4:3 aspect
Resolution	1024 x 768
Pixel pitch	0.297(H) x 0.297(V)
Total Display Colors	16 millions
Viewing Angle	Horizontal: 150° Vertical : 150° (CR>=5)
Contrast Ratio	500:1 (typ)
Panel Brightness (cd/m ²)	250 cd/m ² (250cd/m ² typical)
Backlight Lamp Life	50,000 hrs min
Connection Interfaces:	
•RF(Coax)	
•S-Video	
•AV input	
•Headphone Jack	
•VGA (15 pin D-sub)	
Specifications:	
Total Watt Speaker output	2Wx2
Plug & Play for VGA	Model specific
FCC (Part 15)	YES
UL	YES
CUL	YES
Mechanical Dimensions:	
W x H x D (W/Stand)	20.1(510.4mm) x 14.3(365mm)x7.2(185mm)
W x H x D (W/O Stand)	20.1(510.4mm) x 12.0(305mm)x2.2(58mm)
Weight (W/O Power Transformer)	9.5 LB/4315g (+/-5%)
Power usage	
AC Power Source	110-240V, ~1.0A, 50/60Hz
Power Input	DC 12V, 3.0A, 36W

6. WARRANTY

CITIZEN WARRANTY

Consumer Electronics Products

Thank you for choosing Citizen!

Citizen Electronics gives the following express warranty to the original consumer purchaser or gift recipient for this Citizen brand product, when shipped in its original container and sold or distributed in Canada by Citizen Electronics or by an Authorized Citizen Dealer:

Citizen Electronics warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, Citizen Electronics shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- b. Any Citizen product tampered with, modified, adjusted or repaired by any party other than Citizen Electronics or Citizen's Authorized Service Centres.
- c. Damage caused or repairs required as a result of the use with items not specified or approved by Citizen Electronics, including but not limited to head cleaning tapes and chemical cleaning agents.
- d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables and paper.
- e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- g. Any product received without appropriate model, serial number and CSA/cUL markings.
- h. Any products used for rental or commercial purposes.
- i. Any installation, setup and/or programming charges.

Should this Citizen product fail to operate during the warranty period,

warranty service may be obtained upon delivery of the Citizen product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized Citizen Service Centre. In-home warranty service may be provided at Citizen Electronics' discretion on any Citizen television with the screen size of 27" or larger. This warranty constitutes the entire express warranty granted by Citizen Electronics and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of Citizen Electronics. To the extent the law permits, Citizen Electronics disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this Citizen product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of Citizen Electronics to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

WARRANTY PERIODS: Parts & Labour (exceptions noted)

- Audio Products: 1 Year (Remote Control, if applicable – 90 Days)
- DVD Products: 1 Year (Remote Control – 90 Days)
- LCD & Plasma Display TV: 1 Year (Remote Control – 90 Days)
- Microwave Ovens: 1 Year
- Television Products: 1 Year (Remote Control – 90 Days)
- VCR Products: 1 Year (Remote Control – 90 Days, Video Heads – 6 Months)

To obtain the name and address of the nearest Authorized Citizen Service Centre or Dealer, please contact:

Citizen Electronics, 455 Gordon Baker Road, Toronto, Ontario M2H 4H2 or visit our web site: www.citizen-electronics.com

For more information on this Warranty or Service Locations, please call (416) 499-5611 or toll free 1-800-663-5954, Monday to Friday 9:00am – 5:00pm Eastern Standard Time.